




# Electric Screen User Manual

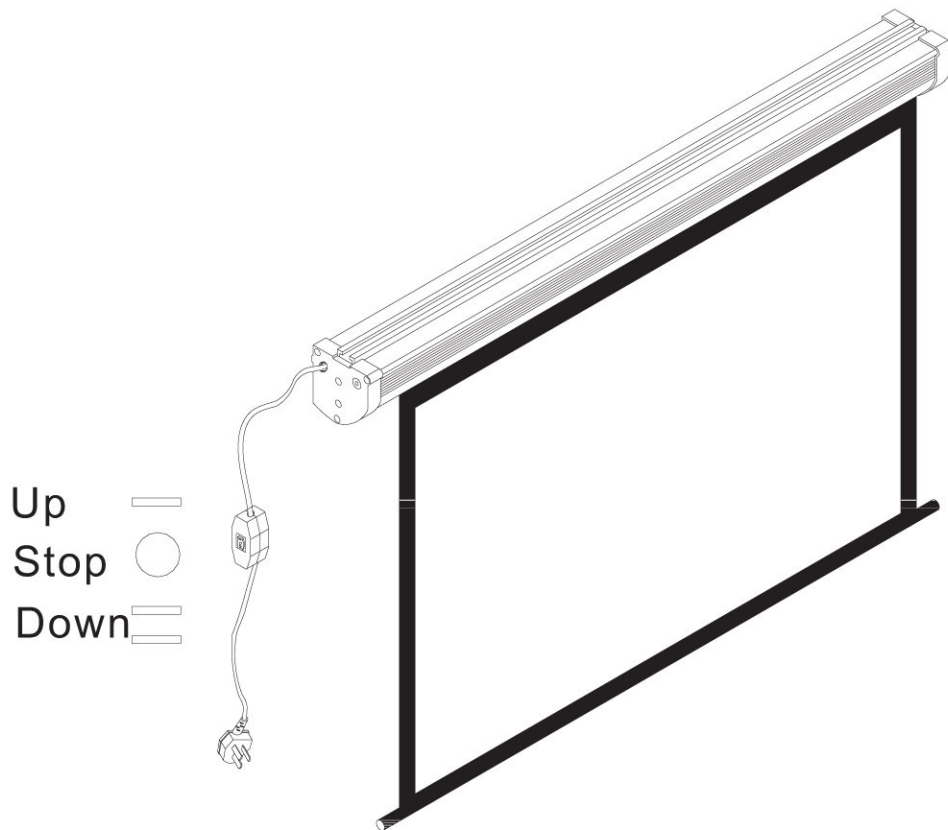

Stretching out the projector screen

Press DOWN key of the switch and the screen will automatically stretch and then stop when it was fully stretched out.

Rolling back the projector screen

Press UP key of the switch and the screen will automatically roll up into the metal drum and stop when the screen was fully rolled up.

Stopping the projector screen

Press the middle part of the switch to stop the screen, and it can be stopped at any position.

Note:

- 1、 The switch should be positioned on STOP when the screen is not in use.
- 2、 Before rolling back the screen, please make sure that there is no insect, dust or other object on the screen.
- 3、 The screen can be roll up and down continually, but continuous times of rolling up and down should not exceed 5 minutes to prevent overheat of the motor. In case of continuous use necessary, you should wait until the motor cools down.

Note: When fixing and installing the screen, insure that the two ends of the screen keep level.

