

Stretching Out Projector Screen

Press DOWN key of the switch and the screen will automatically stretch down and then stop when it is fully stretched out.

Rolling Back Projector Screen

Press UP key of the switch and the screen will automatically roll up into the metal drum and stop automatically when the screen is fully rolled up.

Stopping Projector Screen


Press the middle part of the switch to stop the screen and it can be stopped at any position.

Note:

1. The switch should be positioned at STOP when the screen is not in use.
2. Before rolling back the screen, please make sure that there is no insect, dust or other object on the screen.
3. The screen can be rolled up and down continually, but continuous time of rolling up and down should not exceed 5 minutes to prevent overheat of the motor. In case of continuous use necessary, you should wait until the motor cools down.


Powered Projector Screen

Wall/Ceiling Installation Manual

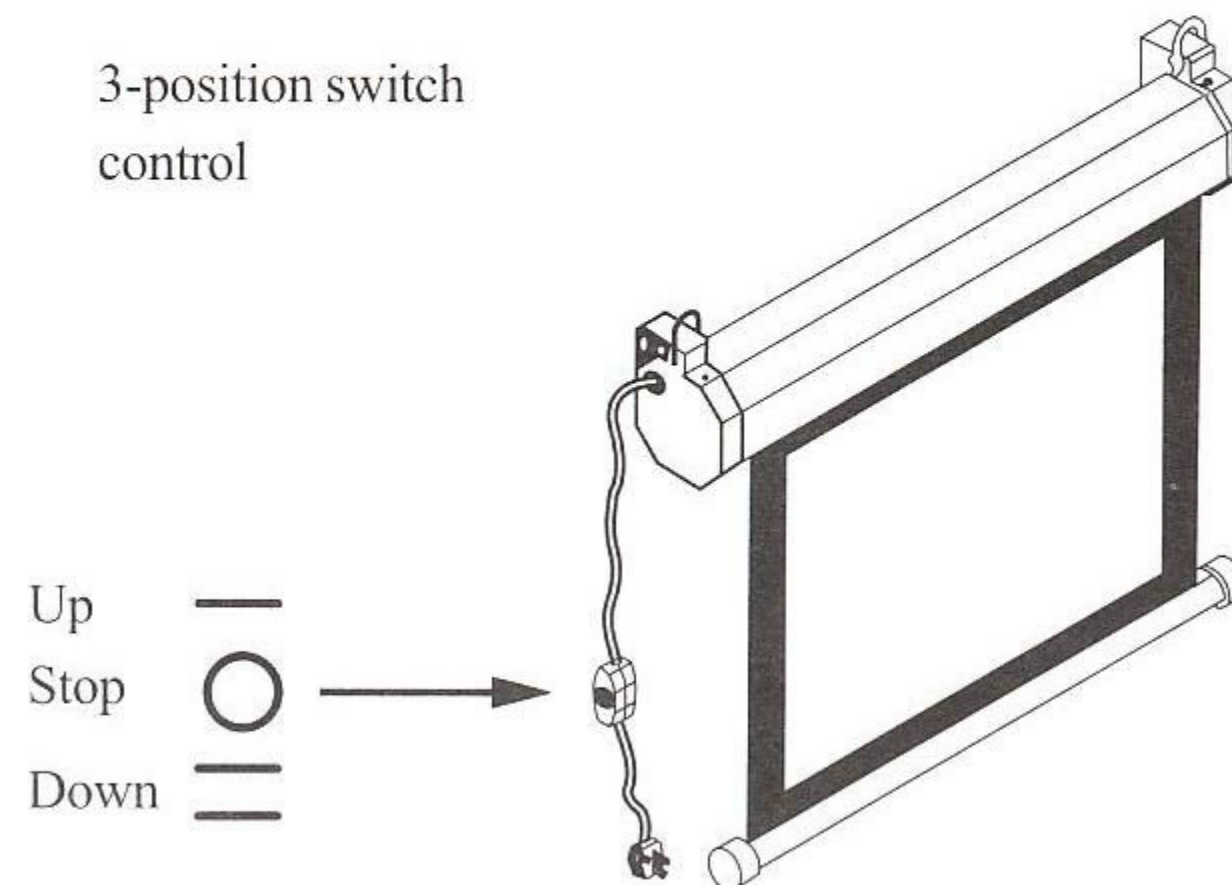

Suggested Installation Method:

Note: When fixing and installing the screen, ensure that the two ends of the screen keep level.

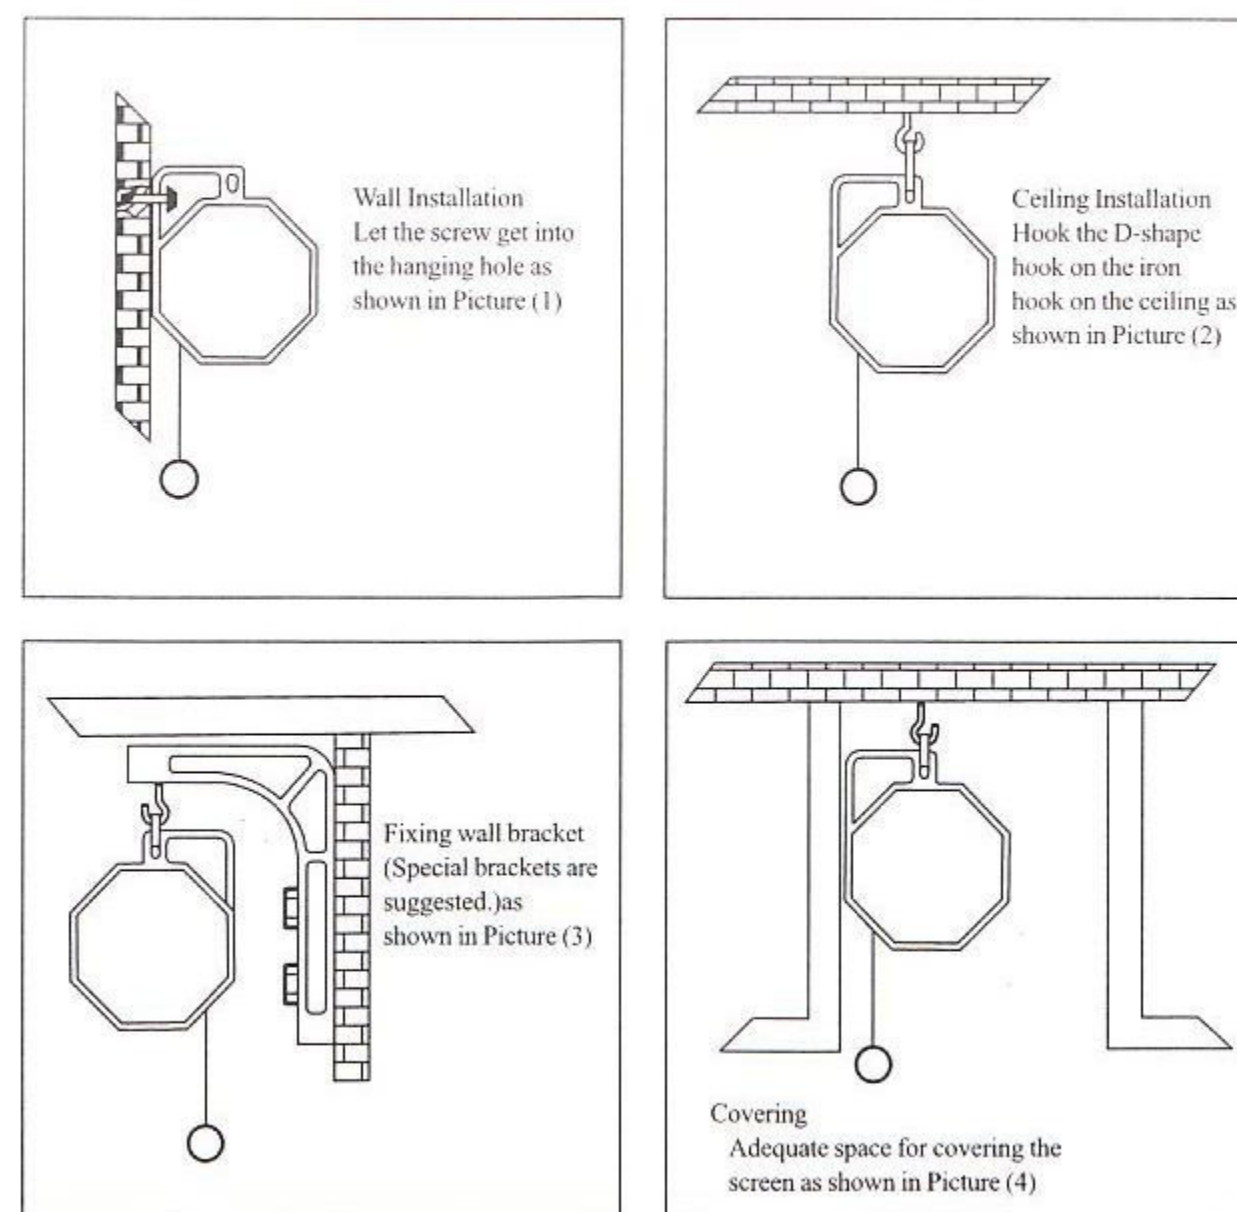

SCREEN USER MANUAL (Powered Screen)

