 



## Hook Installation

2 hooks will be properly fixed on the ceiling and the screen will be hooked on the hooks.

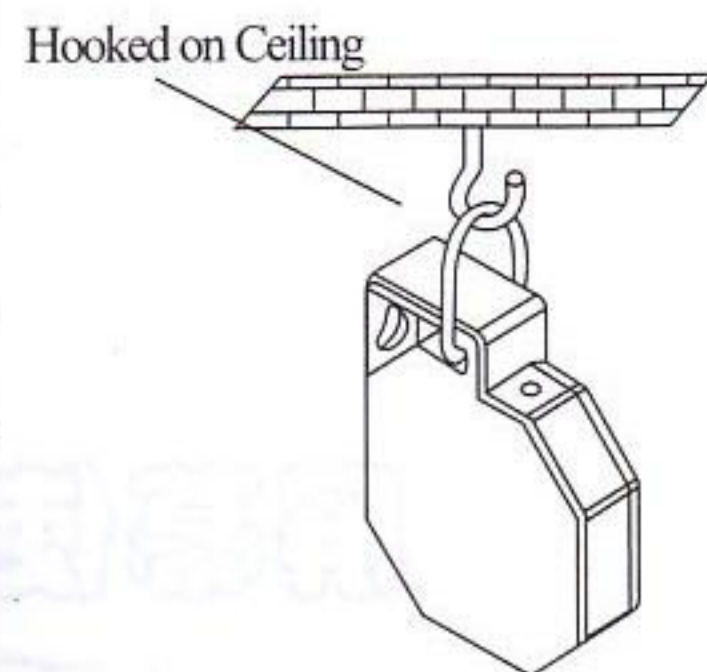

## Bracket Installation

 2 brackets will be properly fixed on the wall and the screen will be hooked on the brackets as shown in the picture.

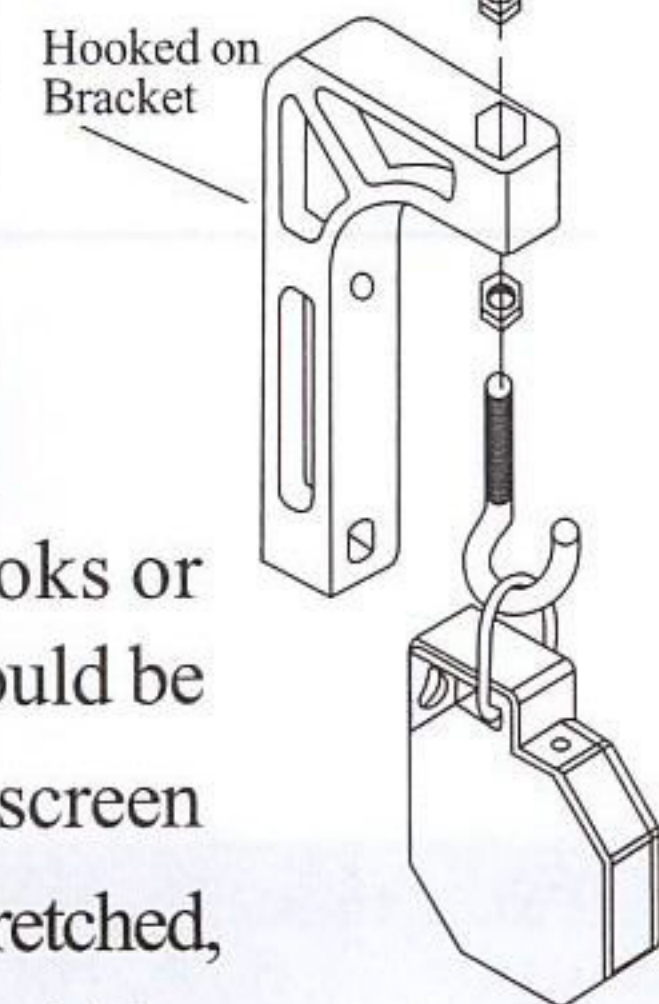

## Note

In either installation of hooks or brackets, adequate space should be considered to pull down the screen and when the screen is fully stretched, the bottom of the screen should be higher than the head level of audience.

## Operation Manual

How to keep your projector screen?


The projector screen is equipped with a unique self-lock device. When you pull down the screen, you may stop in the middle and release the handle but the screen will be locked in the position. When you pull it down a little again, the lock will open and if you release the handle, the screen will roll back automatically into the protective drum.

## Precaution:

When the screen rolls up into the drum quickly, the lower spindle may hit the drum and cause damage. Therefore, please hold the screen handle with your hand so as to reduce the speed.

## Handle-type Projector Screen

### Wall/Ceiling/Bracket Installation Manual

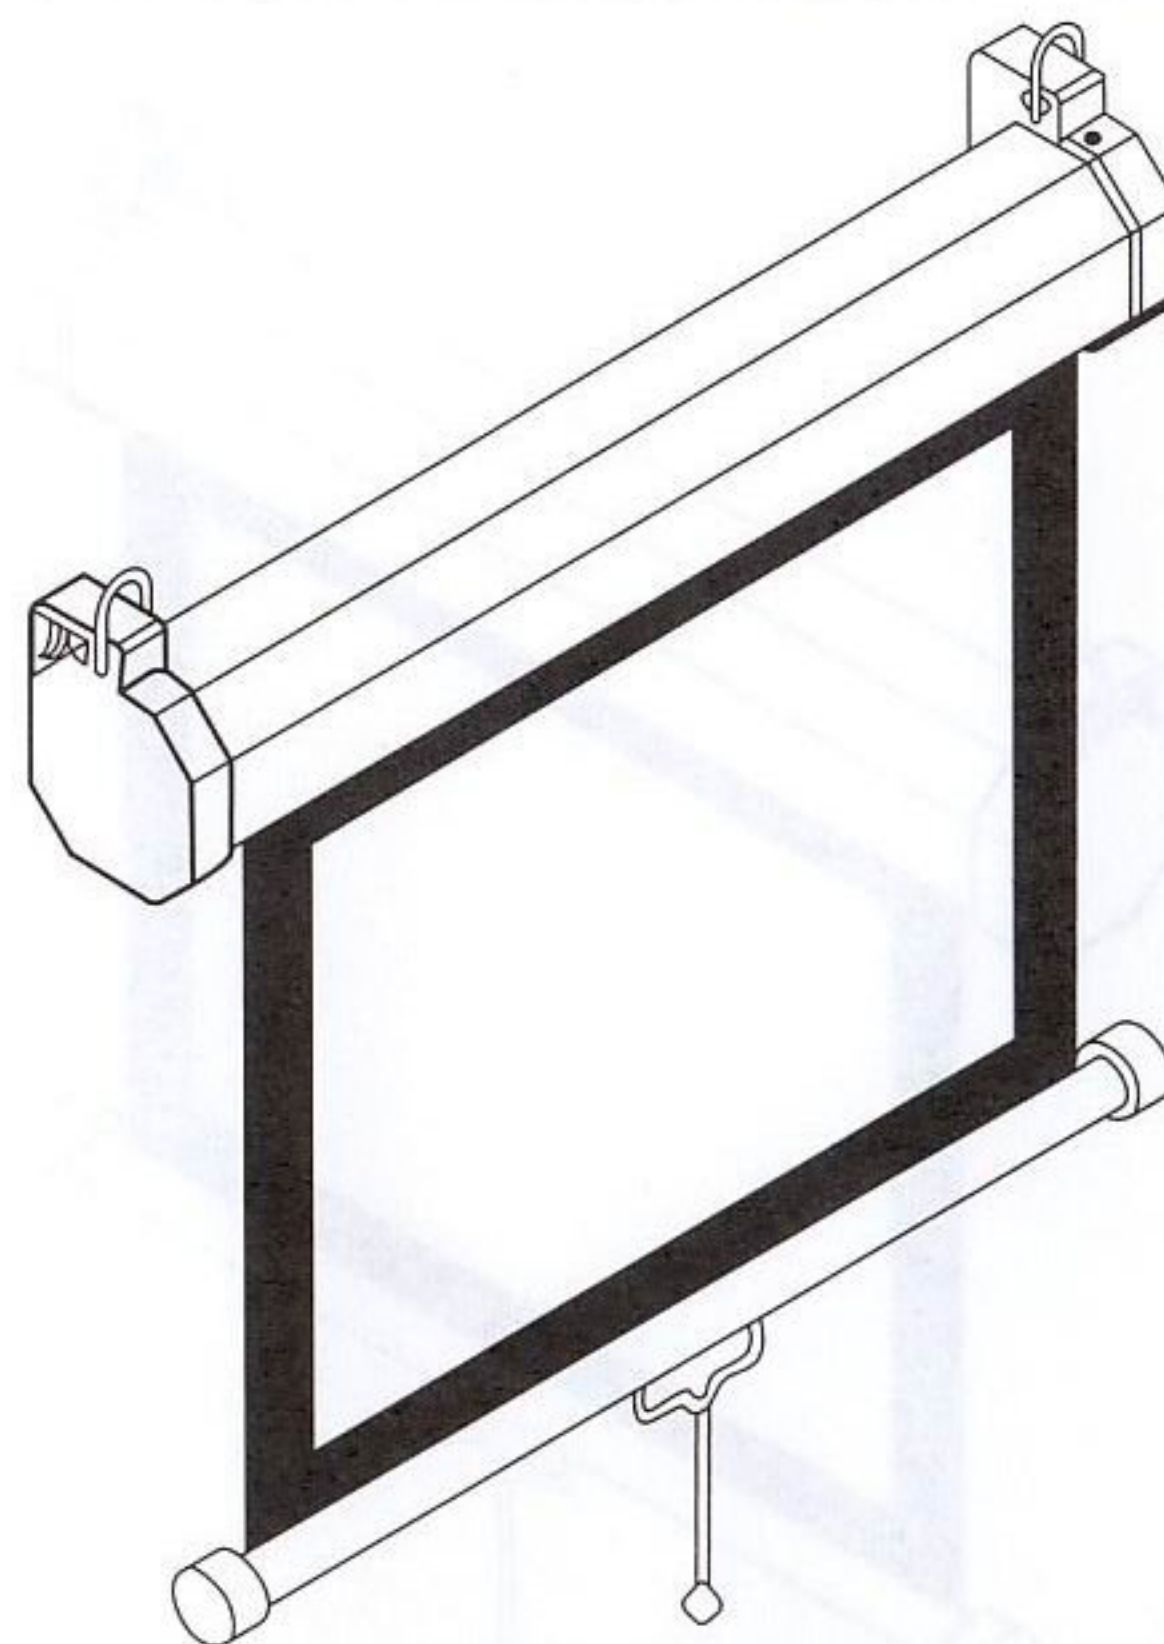


## Installation Method:

The screen should be installed where there is the best viewing angle of the audience. In either installation of hooks or brackets, the screen should be installed level. Correct installation and operation will extend lifespan of the projector screen.

## Wall Installation

On each end of the screen drum, there is a hanging hole. In case that you want to hang the screen on the wall, you can fix two nails or screws on the wall and then hang the screen on them.

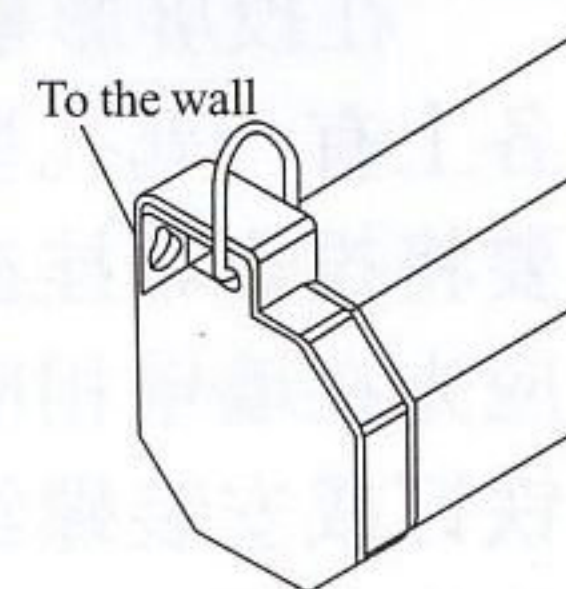

YTK

## SCREEN USER MANUAL (Handle Screen)

